

PREPARATION FOR USE


Check Power

If using AC power, be sure local line voltage matches voltage printed on the scale's power adapter. If not, do not use AC power.


Connect adapter plug to input jack at rear.

To use battery power, remove battery cover and insert three LR14 ("C") batteries.

Allow at least five minutes warm-up time, for scale to stabilize before operation.

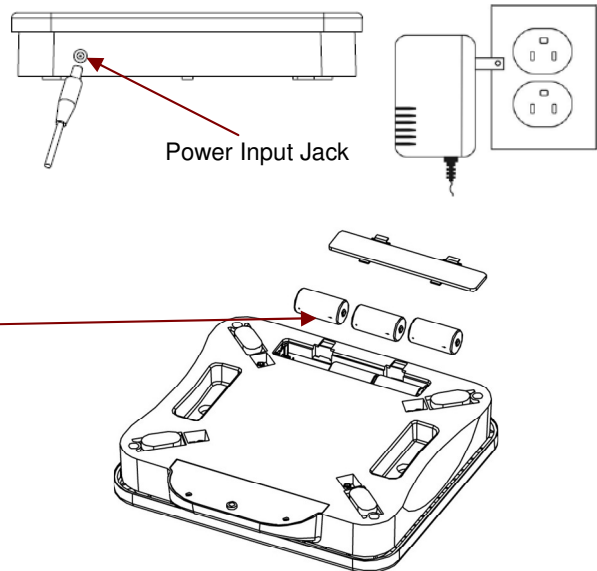

SELECTING THE LOCATION: Place on a firm, steady surface with sufficient space.

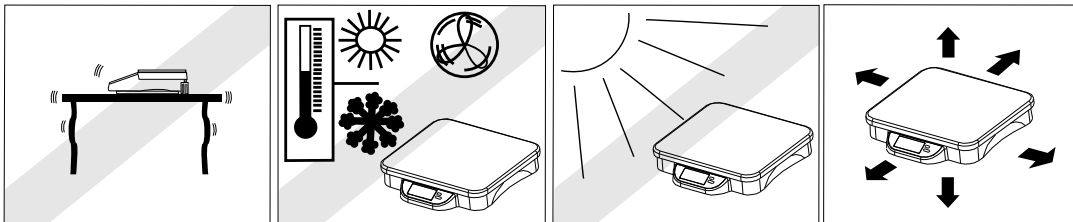

Avoid excessive air current, vibrations, heat sources, or rapid temperature changes.


SAFETY PRECAUTIONS



For dependable operation of this product, observe the following precautions:


- Verify that the input voltage printed on the power Adapter and the plug type matches the local power supply (if using AC power).
- Make sure that the power cord does not pose an obstacle or tripping hazard.
- Disconnect the product from the power supply when cleaning.
- Do not operate this product in hazardous or unstable environments.
- Do not drop loads on the pan.
- Use only approved accessories and peripherals, as available.
- Operate the product only under ambient conditions specified in the Instruction Manual.
- Service should be performed by authorized personnel only.


CONTROLS

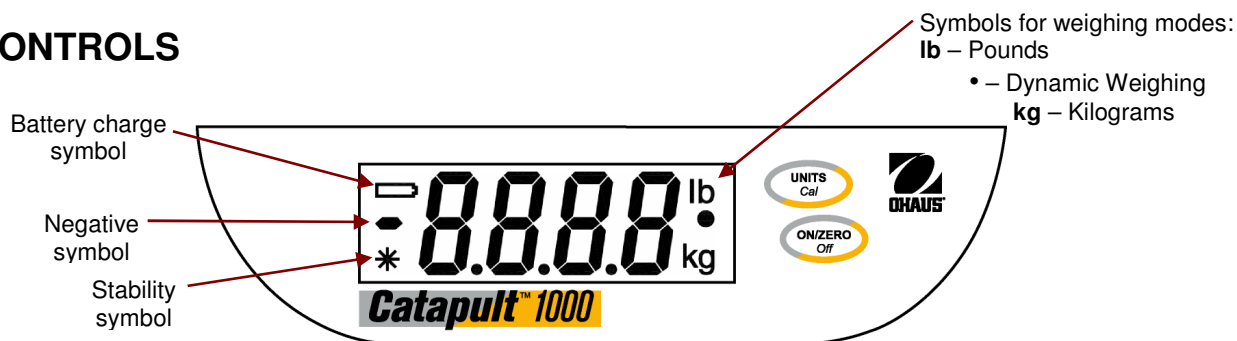


Button	Functions	
UNITS Cal	Short Press	Changes weighing unit and weighing mode. In Dynamic Weighing Mode, starts countdown.
	Long Press	Starts calibration.
ON/ZERO Off	Short Press (when off)	Turns scale on.
	(when on)	Sets display to zero.
	Long Press	Turns scale off.

OPERATION

Power On: Press  All display segments appear, then the software version. Display resets to zero.

To Zero: Press  when scale is on, display returns to zero.

To Tare: Press  with container on scale. Add mass to see NET weight. If both sample and container are removed, display shows a negative value.

Overload: If load exceeds scale capacity, “E” appears. Remove load, scale returns to normal.

Auto Shut-Off: When running on batteries, scale turns off after four inactive minutes.


Dynamic Weighing


With platform empty, press  repeatedly until bullet • flashes.

Place a mass on the platform. The scale shows “-A-”.
(If using a container, press **ZERO** to tare.)

Press  to start the averaging countdown from 5 seconds.

Averaged weight appears. Bullet • stops flashing when process is complete. Display holds until a button is pressed.

To Exit, remove mass from platform. Press  until **kg** or **lb** appears on display.

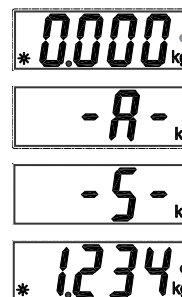

P/N 80253136