
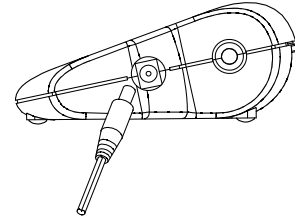


PREPARATION FOR USE

Battery Installation:

Open battery cover on bottom of the Indicator. Install three LR14 ("C") batteries (not included). Orient batteries as shown on inside cover. Close battery cover.

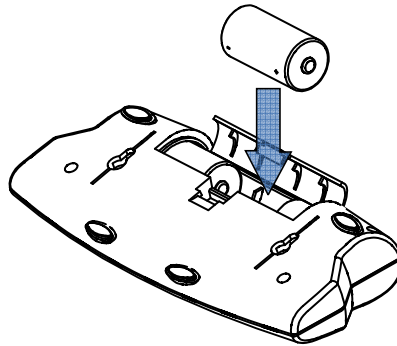

AC Adapter Installation:


Check that local line voltage matches voltage printed on the AC adapter label. Then connect the scale to the power supply.



Mount Indicator as desired.

...with or without brackets.

Options below:

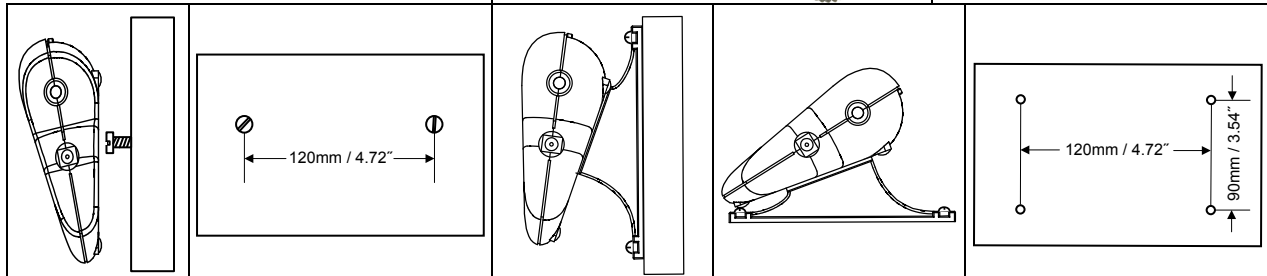


SELECTING THE LOCATION:

Place on a firm, steady surface.

Avoid excessive air current, vibrations, heat sources, or rapid temperature changes.


Use leveling feet to level the base.

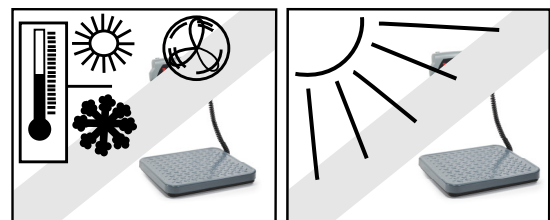

SAFETY PRECAUTIONS

- Before plugging in the indicator, verify that local power supply matches voltage printed on AC adapter. (Use only the adapter provided.)
- Disconnect the indicator from the power supply when cleaning.
- Do not operate this product in hazardous or unstable environments.
- Do not drop loads on the platform.
- Operate the product only under ambient conditions specified in the Instruction Manual.
- Service should be performed by authorized personnel only.

CONTROLS

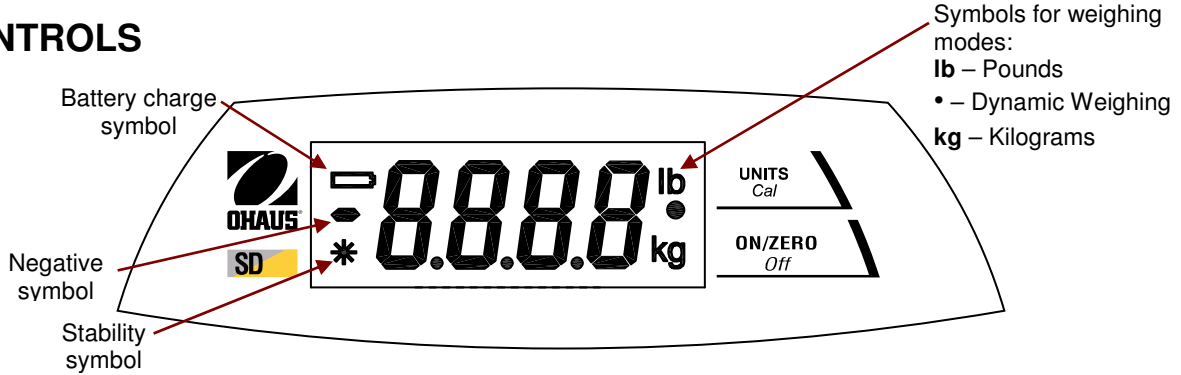

Button	Functions	
UNITS <i>Cal</i>	Short Press	Changes weighing unit and weighing mode.
	Long Press	In Dynamic Weighing Mode, starts countdown. Starts calibration.
ON/ZERO <i>Off</i>	Short Press (when off)	Turns scale on.
	(when on)	<i>If balance is on, sets display to zero.</i>
	Long Press	Turns scale off.

OPERATION

Power Up Test: Press **ON/ZERO Off**. All display segments appear, then the software version. Display resets to zero.

Zero Function: Press **ON/ZERO Off** when scale is on, display returns to zero. When adding additional mass, press **ON/ZERO Off** repeatedly to scale's full capacity. With a container, press **ON/ZERO Off** to Tare. Add mass to see NET weight. If both sample and container are removed, a negative value will be displayed. Press **ON/ZERO Off** to Zero.

Overload: If load exceeds scale capacity, "E" appears. Remove load, scale returns to normal.


Auto Shut-Off: When running on batteries, scale turns off after four inactive minutes.

Dynamic Weighing

With platform empty, press **UNITS Cal** until bullet • flashes.



Place a mass on the platform. The scale shows "-A-". (If using a container, press **ON/ZERO Off** to tare and return to zero.)

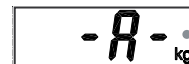

Short-press **UNITS Cal** to start the averaging countdown from 5 seconds.



Averaged weight appears. Bullet • stops flashing when process is complete. Display holds until a button is pressed.



To repeat process, press **UNITS Cal** with a mass on platform or container.

To Exit, remove mass from platform or container. Press **UNITS Cal**.



P/N 80253132